


Production Test Suite for the SPEC boards

User Manual

Revision 2.0

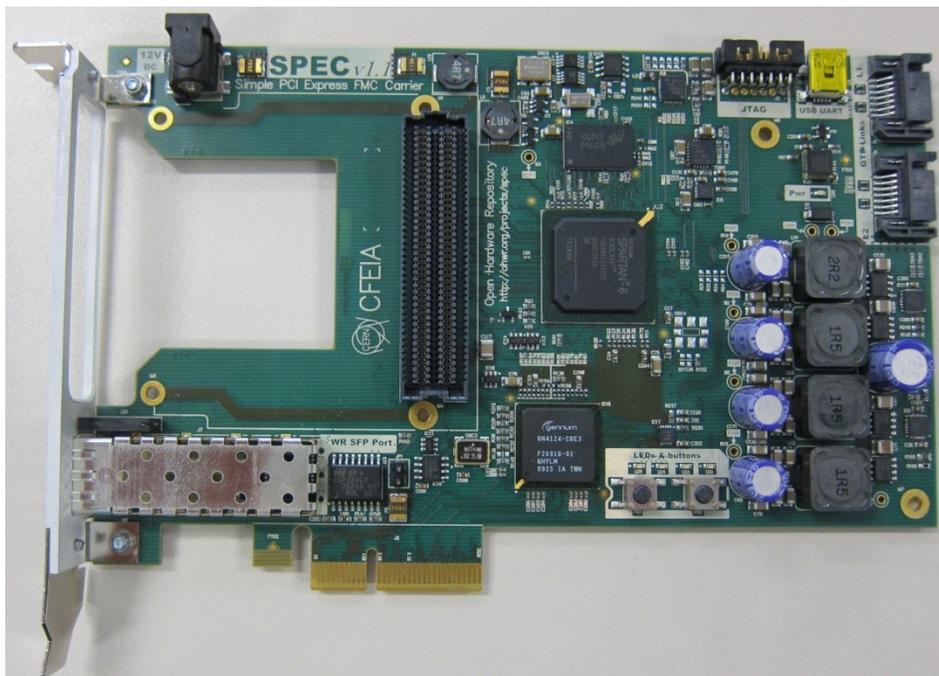

Revision Table

Revision	Date	Author	Comments
0.1	22/06/2011	Renan LETHIECQ, CERN	Initial version
0.2	01/07/2011	Samuel IGLESIAS GONSALVEZ, CERN	Added new chapters
1.0	03/08/2011	Samuel IGLESIAS GONSALVEZ, CERN	Initial version for production SPEC v4.0
1.1	23/08/2011	Samuel IGLESIAS GONSALVEZ, CERN	Added First Time Setup chapter.
2.0	27/05/2013	INCAA Computers BV	Changed list of hardware items, the test procedure, and figures 4 and 8. Changed description of Test05.

Table of contents

Revision Table.....	2
Introduction.....	4
List of tests.....	6
PTS Hardware and Software elements.....	7
First Time Setup.....	8
Test Procedure.....	9
Log files retrieval.....	13
Common causes of test failure.....	15
Test00.....	15
Test01.....	15
Test02.....	16
Test03.....	16
Test04.....	16
Test05.....	16
Test06.....	17
Test07.....	17
Test08.....	17
Test09.....	17
Test10.....	17
Test12.....	18
What to do in case of error of the application.....	19

Introduction

The Simple PCIe FPGA Mezzanine Card Carrier, or **SPEC**, is a 4-lane PCIe carrier for FPGA Mezzanine Cards (VITA 57). It provides memory and clocking resources and supports the White Rabbit timing and control network.¹ The figures 1-3 show different views of the SPEC board.

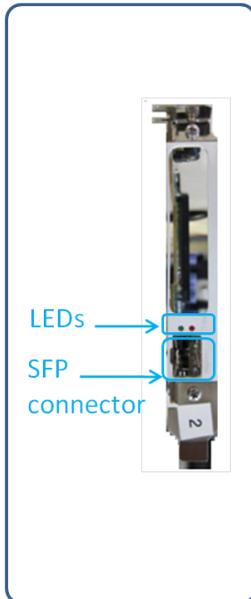


Figure 1: SPEC board front connector

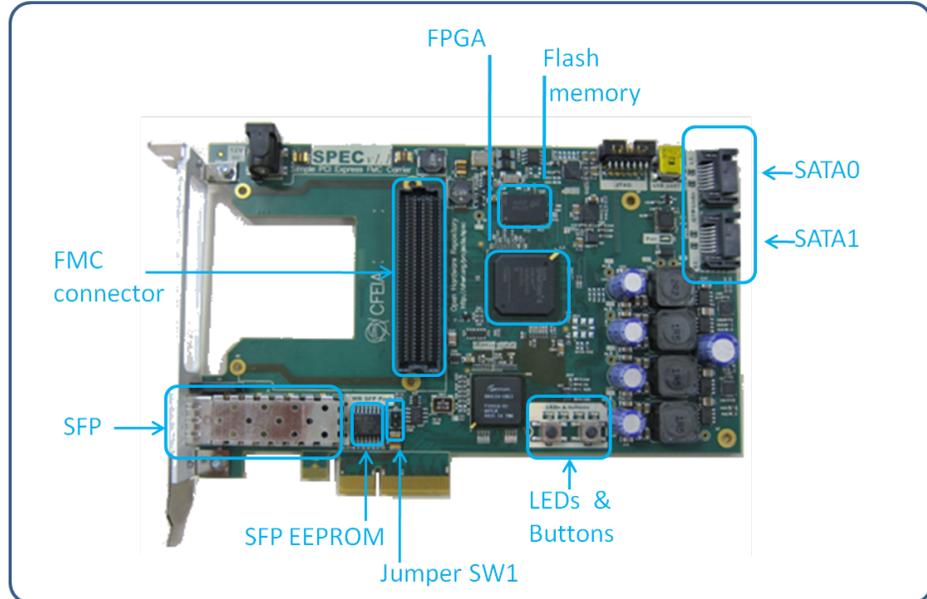


Figure 2: SPEC board top view



Figure 3: SPEC board bottom view

¹More information on: <http://www.ohwr.org/projects/spec/>

Production Test Suite, or **PTS**, is the environment designed for the functionality tests of the SPEC boards after manufacturing. It assures that the boards comply with a minimum set of quality rules, in terms of soldering, mounting and fabrication process of the PCBs.

PTS was originally intended for testing the boards specifically designed for the Open Hardware Repository², but it can also be adapted to testing other boards.

It is important to note that PTS refers only to the functionality testing of the boards and it is not covering any verification or validation tests of the design.

This document describes the PTS components and its use.

List of tests

The PTS consists of a set of twelve independent tests, each one checking a different part of the SPEC board. Table 1 gives a short description of each one of them.

Test	Short description	User Intervention
00	GENNUM chip: EEPROM testing	No
01	FMC connector: Power supply pins testing	No
02	FMC connector: Low speed pins testing	No
03	Flash memory: firmware loading, storing MAC and booting testing	Yes
04	EEPROM SFP connector: identification testing	No
05	SATA port, SFP port and high speed pins of FMC connector testing	No
06	Silabs SI570 oscillator testing	No
07	DDR memory: data and address lines testing	No
08	PLL and oscillators testing	No
09	Thermometer sensor: unique ID reading	No
10	USB UART: connectivity testing	No
11	Not used. It can be used to add a new test.	-
12	GENNUM EEPROM: ID testing	No

Table 1: TPS list of tests

PTS Hardware and Software elements

- In terms of hardware, the PTS is composed of:
 - A computer.
 - A barcode reader to be plugged to the USB port of the computer.
 - A PCI Extender board to be plugged to the PCI port of the computer. One metal stick and two screws to fix the board to the computer box.
 - An FMC mezzanine tester board.
 - One 0.5 m SATA-to-SATA cables.
 - A SFP loopback connector (Molex 74720-0501)
 - A 1 m USB-to-miniUSB cable.
 - Jumpers.
 - A USB memory key.
 - Mouse and keyboard.



Figure 4: provided materials

- In terms of software, the provided computer is equipped with the following:
 - Ubuntu Linux, with kernel 2.6.38 or higher.
 - Python 2.7.
 - The PTS environment installed.
 - Driver *gnurabbit* installed.
- The user login is the following:

Username user
Password baraka

First Time Setup

- 1) Confirm that the computer is switched off and plug the PCI Extender board into the slot indicated in Figure 4. It is recommended to use the provided metal stick and the screws to fix the PCI Extender into the computer box.

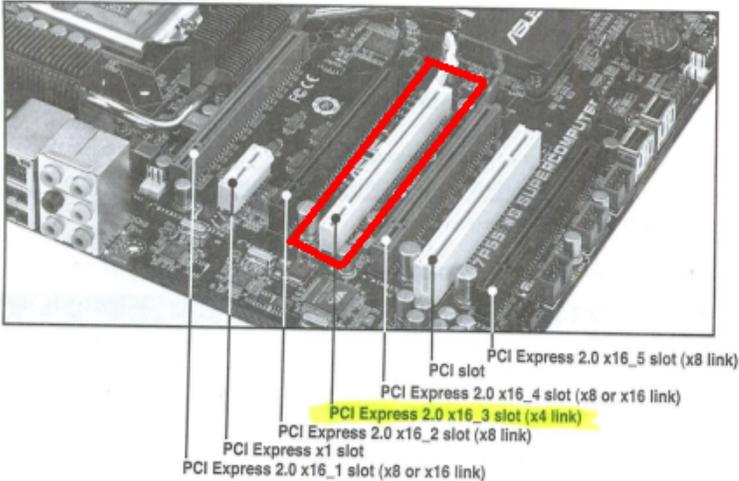


Figure 5: PCI Extender should be plugged in x4 link slot.



Figure 6: PCIe extender plugged in the corresponding slot.

- 2) Plug the barcode reader into one available USB slot of the provided computer.

Test Procedure

- 1) Before starting the test procedure, it is needed to wear an antistatic wrist band to avoid electrostatic issues when handling the boards and the cables.
- 2) Place the barcode sticker of the SPEC board under test on the position indicated in yellow by Figure 4. The sticker should be placed with the barcode next to the edge.

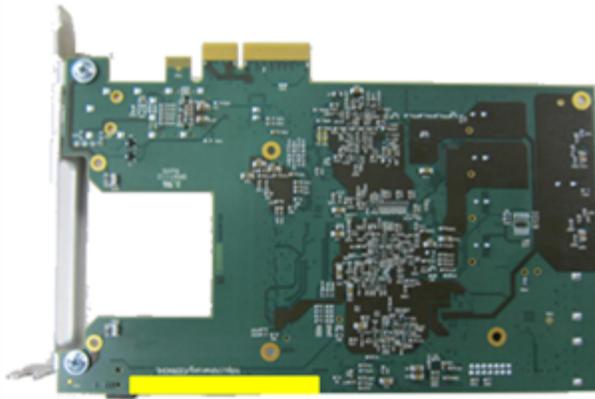


Figure 7: Barcode sticker position

- 3) Place the mezzanine tester board on the FMC connector of the SPEC board under test. Fix the mezzanine to the SPEC board using the provided screws.
- 4) On the SPEC board under test, place the provided jumper on SW1 as figure 2 indicates.
- 5) On the SPEC board under test, connect a SATA cable between SATA 0 (GTP Link L1) and SATA 1 (GTP Link L2).
- 6) Connect the SFP loopback in the SFP connector of the SPEC board under test, you need to hear 'click'.
- 7) Connect the USB cable between the USB UART connector of the SPEC board under test and any USB slot in the computer.

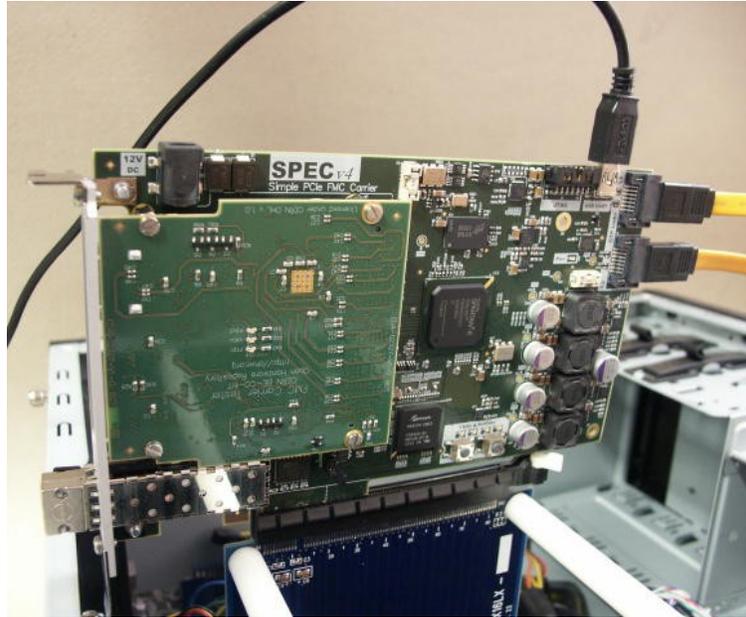


Figure 8: SPEC board with all the cables plugged.

- 8) Plug the SPEC board under test in the corresponding connector of the PCI Extender.
- 9) Switch on the computer and verify that the Power LED in the SPEC board under test as well as the three Power LEDs of the mezzanine tester board are on. This will confirm that the boards are properly plugged and that the power supplies of both boards are proper.

If some of these LEDs are off, there is a problem with the corresponding power supply lines of the board.

- 10) After the computer has finished with the booting procedure, a terminal running the testing program appears automatically in the middle of the screen.

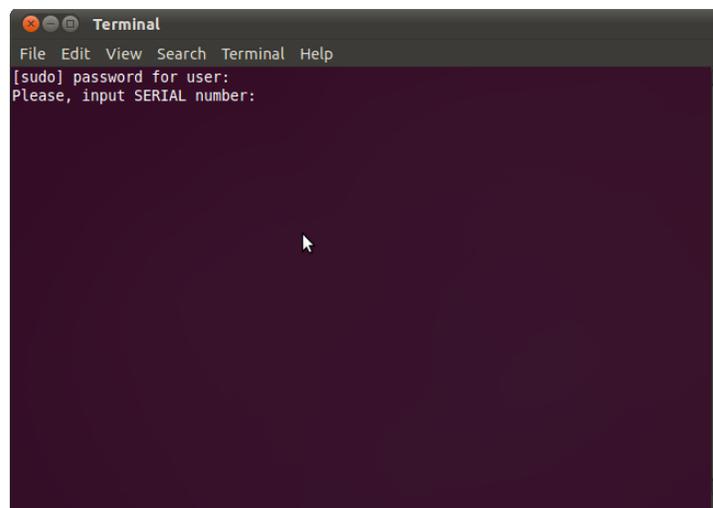


Figure 9: Testing terminal

If that is not the case, follow these instructions:

- i. Double click on the black icon present in the middle of the screen, or in the upper panel.
- ii. At the top of terminal window, you should see:

`user@[name of the pc]:~$`

After the \$ execute the following:

`./run_pts.sh`

11) If needed, type the password: **baraka**

12) The program asks for the serial number of the board and the MAC address.

- i. Confirm that the barcode reader is well plugged in any of the USB ports of the computer.
- ii. Check that the cursor is on the terminal
- iii. Place the barcode reader in front of the barcode sticker of the SPEC board under test at around 10 cm; then press the reader's button. Normally the code will appear on the terminal.
- iv. Press enter.
- v. The program will ask for a second serial number, in case the manufacturer has a different barcode system. Type the second barcode number, or, if there is no second barcode, just press ENTER.
- vi. The program will ask for a MAC address of the SFP port. This step is optional and if the address should not be assigned, just press ENTER. The test program will start!

13) Remove the jumper when the program asks for that.

14) The software will automatically start executing tests 00 to 12.

15) Test 03 require the user's intervention and will ask the user to check the LEDs and press the SPEC's buttons.

16) Wait for the testing to finish and finally check the results.

In case of error, you can repeat the tests one time more for the same board. If you need to repeat them more times, please report to the responsible of tests at CERN.

17) Once the results are checked, switch off the machine to repeat this process with another board. To switch off, click on the power button placed in the upper right corner of the desktop and select **Shut Down**, as Figure 10 indicates.

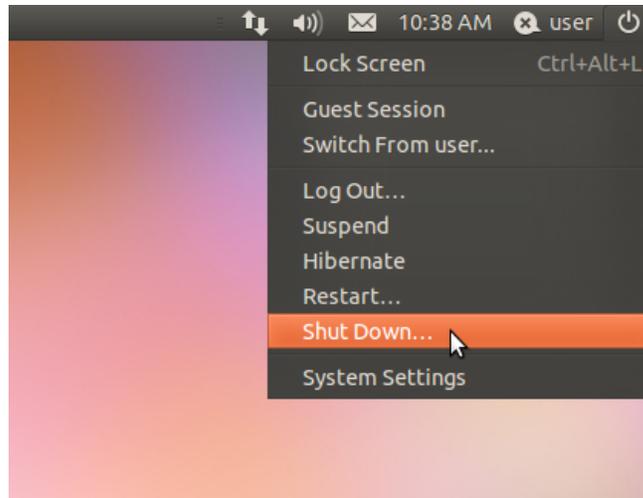


Figure 10: Shut down

Log files retrieval

When the testing of all the boards has finished, it is needed to deliver all the log files to CERN. To do so, please follow the instructions:

- 1) Plug the USB memory key in the computer.
- 2) Wait until Ubuntu mounts automatically the device and using the file explorer³ navigate to **/home/user/pts/log**
- 3) Select all the .zip files in this folder and copy them to the USB memory. To copy them, just right click and select **copy**. Using the file explorer, click on the USB device that appeared on the left column, and copy the .zip files using right click and selecting **paste**.

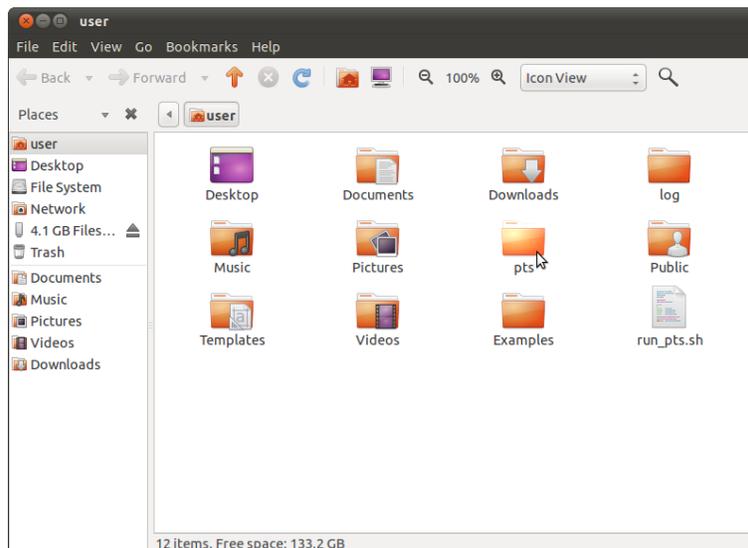


Figure 11: UBUNTU file explorer

- 4) Click on the eject button on the left of the file explorer window and remove the USB key.

³ File explorer is accessible clicking on Places in the upper panel and clicking on "Home Folder"

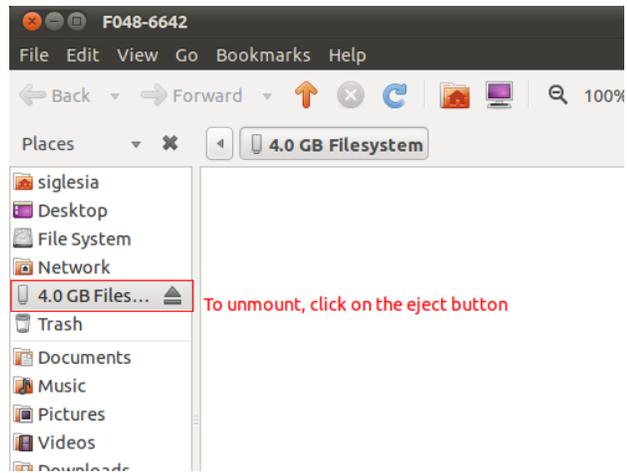


Figure 12: Removal of the USB key

- 5) Transfer the data to another computer with Internet access.
- 6) Finally, send the email to the responsible of tests at CERN.

Common causes of test failure

Once the testing has finished all the errors that may have appeared will be listed on the screen. Usually, the error message is self-explanatory. If you need detailed information, the test log files can be found in **/home/user/pts/log**.

Log files with detailed descriptions of the tests will have been automatically generated and archived in a .zip file called: **zip_run_<run id>_<timestamp>_SPEC_<serial number>.zip**. To extract the documents at the provided computer, go to the **/home/user/pts/log** directory using the file explorer as indicated above, right-click on the .zip file using the file explorer and select *Extract Here* in the listed menu.

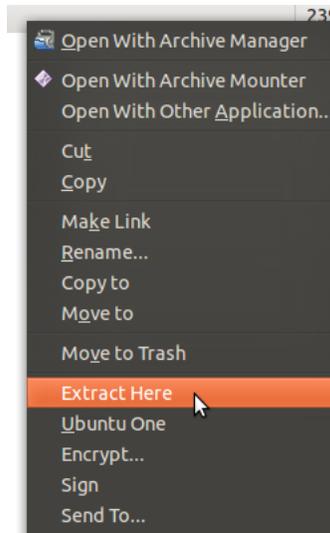


Figure 13: UBUNTU file explorer

Test00

This test checks the EEPROM of the GENNUM chip.

Common errors:

- Bad soldering of EEPROM chip or GENNUM chip.
- Jumper not removed.

Test01

This test checks the low speed pins of FMC connector (low pin count connector).

Common errors:

- Bad FMC connection: soldering problem, wrongly assembled...
 - Verify that the FMC Carrier tester board is tightly screwed on.

Test02

This test loads a Firmware file to the Flash memory. When it finishes, it forces the FPGA to boot using the file in the Flash memory chip. Finally, the utility of this firmware just blinks the LEDs present on the front panel when the user presses the buttons, the other LEDs are on.

Common errors:

- Bad soldering of Gennum chip.
- Problems in the multiplexer chips (IC12, IC13, IC14, IC18).
- Problems in the Flash chip: bad soldering, faulty chip.
- Bad soldering between FPGA and Flash chip.
- Problems in the LEDs or buttons: bad soldering, faulty components.

Test03

This test checks the voltage of the power pins in FMC connector.

Common errors:

- Bad FMC connection of power pins.
- Wrong voltage values given by the SPEC carrier. Problems with related power converter circuit in the SPEC carrier.
- Problem in the I2C communication: FPGA_SDA, FPGA_SCL pins.
- As it is the first test to execute: problem in soldering of Gennum's chip or faulty ones, FMC carrier tester wrongly plugged or not present.

Test04

It reads the identifier value from the SFP connector's EEPROM.

Common errors:

- No access using I2C protocol.
- Faulty provided SFP connector.
- Provided SFP connector badly plugged.

Test05

It checks the SATA ports, SFP port and high speed pins on FMC connector (low count connector)

Common problems:

- FMC high speed pins connectivity problem: DP0, GBTCLK_M2C, REF_CLK_101 and REF_CLK0_123 (the tests use these clocks given by the FMC Carrier tester and the output of the PLL as a reference clock).

- SATA connectivity problem.
- SFP connectivity problem.
- Given cables and adaptors are broken.

Test06

It checks the Silabs SI570 oscillator connectivity.

Common problems:

- No access using I2C: bad soldering.
- No arrival of the clock into FPGA: bad soldering problem.

Test07

It checks the connectivity of the data and address lines of DDR memory.

Common errors:

- RAM Memory chip badly mounted: some data/address lines are not working. No answer when trying to access it.

Test08

It checks the PLL and rest of oscillators present on SPEC board.

Common problems:

- Faulty oscillators, faulty PLL chips.
- Errors in the PCB related to oscillators, PLL and FPGA connections.

Test09

It reads the unique serial number from the thermometer sensor.

Common errors:

- No access using one wire protocol: bad soldering.
- Thermometer sensor: faulty chip, bad soldering.

Test10

It checks the connectivity of the USB UART connector.

Common errors:

- No access using serial port protocol: bad soldering.
- USB cable is faulty.
- USB cable wrongly plugged.

Test12

Overwrites the GENNUM's EEPROM with the vendor/device ID for the SPEC board

Common errors:

- Error when checking the EEPROM content. As the EEPROM was already tested in test00, this is a critical error, repeat the test only once. If the problem persists send an email to the responsible of the tests at CERN.

What to do in case of error of the application

Report the problem explaining it, attach a screenshot or a copy of all the information present on the terminal and send it to the responsible in charge of the tests at CERN.